




Easy Trellis INSTALLATION

Tools Required: Tape Measure, Spirit Level, Drill, Pencil, Mitre Saw or Angle Grinder with steel cutting blade.

ASSEMBLY SHOULD BE ON A FLAT SURFACE


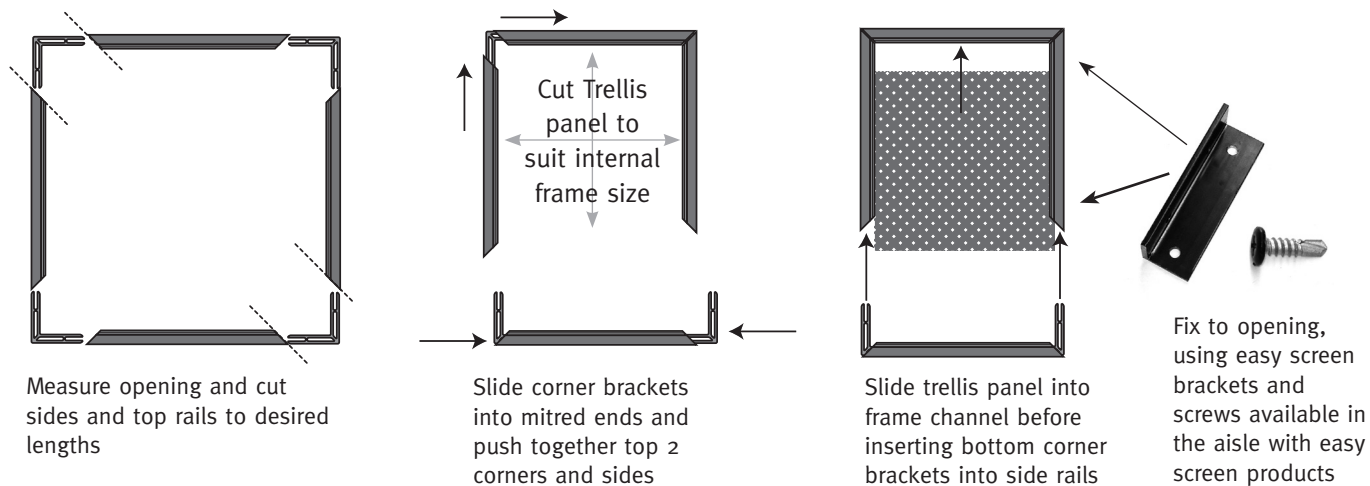


More Easy Screening Options...

For Visual Impact

940mmx1840mm aluminium Deco panels, available in 5 profiles and 4 colours.

Colours:

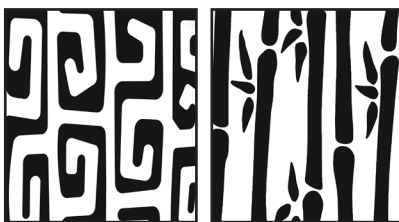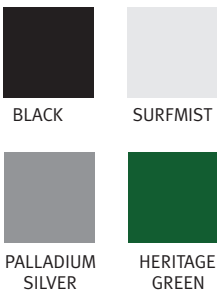

Aztec

Bamboo



Riverstone

Fern

Zebra

Budget Slat Screen Panel

Ready made for speedy, simple DIY install. Ideal for screening applications, increased privacy or rotated to make a stylish & cost effective boundary panel.



Available at
BUNNINGS
warehouse



www.protectoraluminium.com.au